



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU/LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV/INPUT	/ SOURCE
TIMESHIFT	-/--
DISPLAY	
ZOOM	
PIP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIMER REC	SLEEP
TV/DVD	TV/DTV
CHP. ADD	INFO
HOME	EPG
DUBBING	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
PAUSE/STEP	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SETUP	SHIFT+MENU
DVD	SHIFT+1
HDD	SHIFT+2
THUMBNAIL	SHIFT+3
SEARCH	SHIFT+ -/--
TITLE	SHIFT+
INSTANT SKIP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A-B	SHIFT+SLEEP
MARKER	SHIFT+INFO
REC MODE	SHIFT+RED
TV	
POWER	SHIFT+POWER
MUTE	SHIFT+MUTE
AV/INPUT	SHIFT+
CH -/+	SHIFT+ P-/+
VOL -/+	SHIFT+ V-/+

