



| ORIGINAL       | SUPERIOR  |
|----------------|-----------|
| POWER          | POWER     |
| MUTE           | MUTE      |
| MENU           | MENU      |
| CLEAR          | EXIT      |
| 1/2/3/4/5      | 1/2/3/4/5 |
| 6/7/8/9/0      | 6/7/8/9/0 |
| PTY            | -/--      |
| DISPLAY        |           |
| ZOOM           |           |
| SETUP          |           |
| / SUBTITLE     |           |
| VOLUME+/-      | VOL+/-    |
| SKIP NEXT/PREV | P+/-      |
| UP             | UP        |
| DOWN           | DOWN      |
| LEFT           | LEFT      |
| RIGHT          | RIGHT     |
| ENTER/SELECT   | OK        |
| / RETURN       | BACK      |
| SLEEP          | SLEEP     |
| RDS            | TV/DTV    |
| DIMMER         | INFO      |
| PROG/MEMO      | EPG       |
| MARKER         | FAV       |
| PAUSE/STEP     |           |

| ORIGINAL     | SUPERIOR    |
|--------------|-------------|
| STOP         | / SMART     |
| REW          | GREEN       |
| PLAY         | YELLOW      |
| FWD          | BLUE        |
| / AUDIO      | SHIFT+MUTE  |
| SEARCH       | SHIFT+EXIT  |
| AUX          | SHIFT+1     |
| DVD          | SHIFT+2     |
| TUNER/BAND   | SHIFT+3     |
| USB          | SHIFT+4     |
| DISP MODE    | SHIFT+      |
| SOUND MODE   | SHIFT+      |
| EQ MASTER    | SHIFT+      |
| VSM          | SHIFT+      |
| ECHO VOL+    | SHIFT+UP    |
| ECHO VOL -   | SHIFT+DOWN  |
| MIC VOL -    | SHIFT+LEFT  |
| MIC VOL+     | SHIFT+RIGHT |
| REPEAT       | SHIFT+BACK  |
| REPEAT A - B | SHIFT+SLEEP |
| TITLE        | SHIFT+INFO  |
| XDSS Plus    | SHIFT+EPG   |
| XTS pro      | SHIFT+FAV   |
| SLOW -       | SHIFT+GREEN |
| SLOW+        | SHIFT+BLUE  |

