


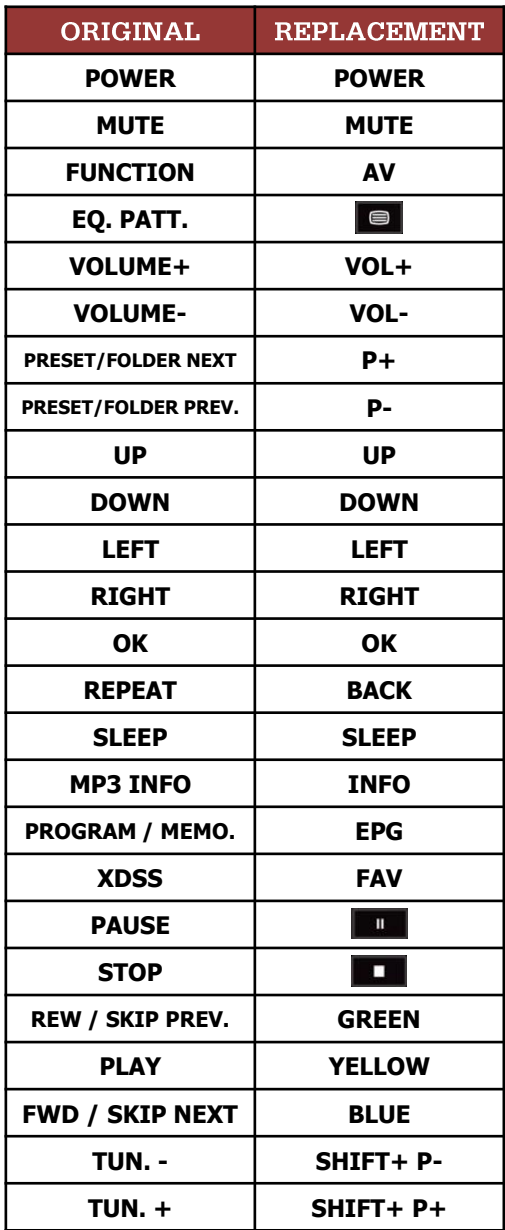

A black universal remote control with the following features:

- Top Section:** POWER (red power button), MUTE (speaker icon button).
- Function Row:** TV, SAT, DVD, AUX.
- Control Row:** MENU, EXIT, SHIFT.
- Numeric Keypad:** 1-9, 0, and a TV/AV button.
- Advanced Function Row:** PVR, SIZE, SETUP, and a button with a speech bubble icon.
- Directional Pad:** A circular pad with +V, P+, OK, -V, and P- buttons.
- Bottom Section:** BACK, SLEEP, TV/DTV, INFO, EPG, FAV, NET TV (red), II (pause), SMART, and playback buttons (red stop, green left, yellow right, blue right).
- Branding:** SUPERIOR 4in1 at the bottom.