



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	AV
CLEAR	SHIFT+EXIT
TIMESHIFT	
MARKER	
TITLE	
SKIP NEXT CHAP	P+
SKIP PREV CHAP	P-
UP – CH/PR	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
INFO	INFO
TV/DVD	TV/DTV
HOME	EPG
OPEN / CLOSE	
PAUSE	
STOP	
REC	RED

[illegible]