



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
↑ / HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
□ / RADIO & INPUT	▢ / SOURCE
OPTICAL	-/--
INFO / DISPLAY	◻
SPEAKER LEVEL	◻
DISC MENU	◻
SOUND EFFECT	◻
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / PRESET+	UP
DOWN / PRESET -	DOWN
LEFT / TUNING-	LEFT
RIGHT / TUNING+	RIGHT
ENTER	OK
🔊 / RETURN	BACK
SLEEP	SLEEP
RDS	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PTY	EPG
MARKER	FAV
OPEN / CLOSE	▲ / NET TV
PAUSE / STEP	▢
STOP	▣ / SMART
*	RED
REW	GREEN
PLAY / MONO/STEREO	YELLOW
FWD	BLUE
*	SHIFT+2
↺ / REPEAT	SHIFT+BACK
TV	
POWER	SHIFT+POWER
AV / INPUT	SHIFT+ ◻
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
PR / CH+	SHIFT+ P+
PR / CH -	SHIFT+ P -

