



ORIGINAL	SUPERIOR
POWER	POWER
⏠ / HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT	📺 / SOURCE
LIST / MENU	-/--
DISPLAY	📺
DUBBING	📺
UP / PR/TRK+	UP
DOWN / PR/TRK-	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
🔌 / RETURN	BACK
DVD	TV/DTV
✓ / MARKER	INFO
EPG	EPG
RED / FAV	RED
GREEN / REPEAT	GREEN
YELLOW / SUBTITLE	YELLOW
BLUE / TEXT	BLUE
🔊 / AUDIO	SHIFT+MUTE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -

ORIGINAL	SUPERIOR
VCR	SHIFT+ TV/DTV
TITLE	SHIFT+INFO
OPEN / CLOSE	SHIFT+ ⬆
PAUSE / STEP	SHIFT+ ⏸
STOP	SHIFT+ ⏹
REC	SHIFT+RED
SCAN REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
SCAN FWD	SHIFT+BLUE
TV	
POWER	SHIFT+POWER
AV	SHIFT+AV
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -

