



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV SYNC	/ SOURCE
DISC SELECT	-/--
DISPLAY	
ENHANCER	
BYPASS	
TITLE	
VOL+/-	VOL+/-
SKIP NEXT/PREV	P+/-
UP/DOWN	UP/DOWN
LEFT/RIGHT	LEFT/RIGHT
BACK	BACK
SLEEP	SLEEP
DIGITAL	TV/DTV
M1	INFO
M2	EPG
M3	FAV
AUTO CAL.	/ NET TV
PAUSE	
STOP	/ SMART

ORIGINAL	SUPERIOR
REW	GREEN
PLAY	YELLOW
FWD	BLUE
MONO/STEREO	SHIFT+MUTE
SETUP	SHIFT+MENU
CD	SHIFT+1
DVD	SHIFT+2
HDMI	SHIFT+3
PC	SHIFT+4
PORTABLE	SHIFT+5
TUNER	SHIFT+6
TV – STB	SHIFT+7
USB	SHIFT+8
VCR	SHIFT+9
INPUT VIDEO	SHIFT+0
DIMMER	SHIFT+
DSP	SHIFT+
REPEAT	SHIFT+BACK
NIGHT	SHIFT+SLEEP
PROGRAM	SHIFT+FAV
SPEAKER LVL	SHIFT+RED
SURROUND	SHIFT+GREEN
TEST TONE	SHIFT+YELLOW
TONE CONTROL	SHIFT+BLUE

