



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DISC MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HOME	-/--
DISPLAY	
CONTENT LIST	
SUB MENU	
TEXT	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
TIMER REC	SLEEP
I.SKIP	TV/DTV
INFO	INFO
GUIDE	EPG
I.REPLAY	FAV
OPEN/CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
DISC	SHIFT+1
HDD	SHIFT+2
USB	SHIFT+3
SUBTITLE	SHIFT+
CH+	SHIFT+ P+
CH -	SHIFT+ P -
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

