



ORIGINAL	SUPERIOR
POWER	POWER
DISC MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
VCR	-/--
SEARCH	
TIMESHIFT	
MENU SETUP	
SUBTITLE	
SKIP NEXT	VOL +
SKIP PREV	VOL -
CH +	P +
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CANCEL	BACK
TIMER REC	SLEEP
DVD	TV/DTV
INFO	INFO
HOME	EPG

ORIGINAL	SUPERIOR
MARKER	FAV
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
PIP	SHIFT+1
HDD	SHIFT+ 
ANGLE	SHIFT+ 
ZOOM	SHIFT+ 
RESOLUTION	SHIFT+ 
INSTANT SKIP	SHIFT+RIGHT
GUIDE	SHIFT+EPG
FAV	SHIFT+FAV
REC MODE	SHIFT+RED

