



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	 / SOURCE
LIST	-/--
DISPLAY	
CHAPTER ADD	
INSTANT SKIP	
SUBTITLE	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
REPEAT	BACK
TV/DVD	TV/DTV
INFO	INFO
TIME RECORDER	EPG
MARKER	FAV
EJECT	 / NET TV
PAUSE	

ORIGINAL	SUPERIOR
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MENU
SEARCH	SHIFT+EXIT
PIP	SHIFT+1
CANC	SHIFT+2
3D SURROUND	SHIFT+3
ANGLE	SHIFT+ 
THUMBNAIL	SHIFT+ -/--
ZOOM	SHIFT+ 
SETUP	SHIFT+ 
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT A – B	SHIFT+BACK
STEP	SHIFT+SLEEP
TITLE	SHIFT+INFO
SHUFFLE	SHIFT+FAV
REC MODE	SHIFT+RED

