



ORIGINAL	SUPERIOR
POWER	POWER
/ HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
MENU / LIST	-/--
DISPLAY	
/ REPEAT	
/ TV/RADIO	
/ TEXT	
SKIP NEXT	P+
SKIP PREV	P -
UP / PR+	UP
DOWN / PR -	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
DUBBING	SLEEP
TV / DVD	TV/DTV
/ ZOOM	INFO
GUIDE	EPG
MARKER	FAV
OPEN / CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE / STEP	
STOP	/ SMART
REC	RED
SCAN REW	GREEN
PLAY	YELLOW
SCAN FWD	BLUE
SEARCH	SHIFT+EXIT
DVD	SHIFT+1
HDD	SHIFT+2
THUMBNAIL	SHIFT+
RANDOM	SHIFT+
PIP	SHIFT+
CHP. ADD	SHIFT+
TITLE	SHIFT+INFO
RED / FAV	SHIFT+RED
GREEN / AUDIO	SHIFT+GREEN
YELLOW / SUBTITLE	SHIFT+YELLOW
BLUE / TIMESHIFT	SHIFT+BLUE

