



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CH. LIST	-/--
TITLE / POPUP	
TEXT	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ BACK	BACK
TIMER REC	SLEEP
/ REPEAT / TV/RADIO	TV/DTV
INFO / MENU	INFO
GUIDE / MUSIC ID	EPG
DISC MENU / REC. LIST	FAV
OPEN / CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE / TIME SHIFT	/ SMART TUBE
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CLEAR	SHIFT+EXIT
SUBTITLE	SHIFT+
CH+	SHIFT+UP
CH-	SHIF+DOWN
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D	SHIFT+BLUE
TV	
	SHIFT+POWER
AV / INPUT	/ SOURCE
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
PR / CH+	SHIFT+ P+
PR / CH -	SHIFT+ P -

