



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ HOME	MENU
CLEAR / MEMORY	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ SOURCE
LIST / MENU	-/--
EQ	
TEST TONE	
LEVEL AV SYNC	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ BACK	BACK
TIME SHIFT	SLEEP
MONO / STEREO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
GUIDE	EPG
FAV	FAV
PAUSE / STEP	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AMP POWER	SHIFT+POWER
/ AUDIO	SHIFT+MUTE
PTY	SHIFT+MENU
RED	SHIFT+EXIT
DVD	SHIFT+1
HDD	SHIFT+2
AV	SHIFT+3
TV/DVD	SHIFT+4
TUNE+	SHIFT+ P+
TUNE -	SHIFT+ P -
PRESET PREV	SHIFT+LEFT
PRESET NEXT	SHIFT+RIGHT
REPEAT	SHIFT+BACK
DRC	SHIFT+SLEEP
TITLE	SHIFT+INFO
VSM	SHIFT+EPG
✓ / MARKER	SHIFT+FAV

