



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AUX	/ SOURCE
CD/DVD	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
DIMMER	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
MARKER	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
/ AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
ANGLE	SHIFT+
PRESET+	SHIFT+ P+
PRESET -	SHIFT+ P -
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP

