



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ AV
CD / DVD	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV.	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER / MEMORY	OK
/ RETURN	BACK
TIMER REC	SLEEP
TV	TV/DTV
TITLE	INFO

ORIGINAL	SUPERIOR
REC MODE	EPG
MARKER	FAV
OPEN / CLOSE	
PAUSE / STEP	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
PIP	SHIFT+1
FM / AM	SHIFT+ -/--
SHOWVIEW	SHIFT+
INSTANT SKIP	SHIFT+
SOUND MODE	SHIFT+
THUMBNAIL	SHIFT+
XTS	SHIFT+LEFT
XTS PRO	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
CHP ADD	SHIFT+FAV

