



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
i / MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / SOURCE
EZ POWER OFF	-/--
SHOW VIEW VIDEO +	
LP	
CM SKIP	
LOCK	
PR/TRK+	P+
PR/TRK -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
EZ REPEAT	BACK
TV/VCR	TV/DTV
EJECT	 / NET TV
PAUSE/HOLD	
STOP	 / SMART
REC/ITR	RED
REW	GREEN

[illegible]