



ORIGINAL	SUPERIOR
POWER	POWER
/ AUDIO	MUTE
/ HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT	/ SOURCE
DISC. MENU / LIST	-/--
DISPLAY	
ZOOM	
SEARCH	
/ SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP / PR/CH/TRK.+	UP
DOWN / PR/CH/TRK. -	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TV / VCR	TV/DTV
TITLE	INFO
THUMBNAIL	EPG
MARKER	FAV
EJECT – OPEN/CLOSE	/ NET TV

ORIGINAL	SUPERIOR
PAUSE / STEP	
STOP	/ SMART
REC	RED
BACKWARD	GREEN
PLAY	YELLOW
FORWARD	BLUE
DVD	SHIFT+1
VCR	SHIFT+2
CHP. ADD	SHIFT+ -/--
SHOWVIEW	SHIFT+
*	SHIFT+
I. SKIP	SHIFT+RIGHT
DUBBING	SHIFT+FAV
REC MODE	SHIFT+RED
PLAY MODE	SHIFT+YELLOW
TV	
POWER	SHIFT+POWER
AV	SHIFT+
VOL+	SHIFT+ VOL+
VOL -	SHIFT+ VOL -
PR. CH. +	SHIFT+ P+
PR. CH. -	SHIFT+ P -

