



ORIGINAL	SUPERIOR
POWER	POWER
🔊 / AUDIO	MUTE
LIST / DISC MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	📺 / AV
RANDOM	-/--
DISPLAY	📺
ZOOM	📺
SETUP	📺
⋮ / SUBTITLE	📺
SKIP NEXT	P+
SKIP PREV	P -
UP / PR. TRK+	UP
DOWN / PR. TRK-	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
🎧 / RETURN	BACK
TIMER REC	SLEEP
TV / VCR	TV/DTV
TITLE	INFO
REC MODE	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	▲
PAUSE /STEP	⏸
STOP	■
REC	RED
REW	GREEN
PLAY	YELLOW
FWV	BLUE
SEARCH	SHIFT+EXIT
DVD	SHIFT+1
VCR	SHIFT+2
DUBBING	SHIFT+📺
CHP ADD	SHIFT+📺
📺 / ANGLE	SHIFT+📺
LOCK	SHIFT+📺
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP
THUMBNAIL	SHIFT+FAV

