



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
LIST	-/--
ANGLE	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STEP	SLEEP
TV / VCR	TV/DTV
INFO	INFO
CHAPTER ADD	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
EJECT	
PAUSE	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SEARCH	SHIFT+EXIT
DVD	SHIFT+ / AV
VCR	SHIFT+ -/--
DUBBING	SHIFT+
TIMER REC	SHIFT+
THUMBNAIL	SHIFT+
LOCK	SHIFT+
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
TITLE	SHIFT+INFO
REC MODE	SIFT+EPG
SHUFFLE	SHIFT+FAV

