



ORIGINAL	SUPERIOR
POWER	POWER
AUDIO	MUTE
MENU/LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV/INPUT	/ SOURCE
/ HOME	-/--
DISPLAY	
ZOOM	
CHP.ADD	
/ SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P-
UP / PR/CH+	UP
DOWN / PR/CH-	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TIMESHIFT	SLEEP
TV/DVD	TV/DTV
SEARCH	INFO
THUMBNAIL	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
PAUSE/STEP	
STOP	/ SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
DVD	SHIFT+1
HDD	SHIFT+2
REPEAT	SHIFT+BACK
DUBBING	SHIFT+SLEEP
TITLE	SHIFT+INFO
A - B	SHIFT+FAV
REC MODE	SHIFT+RED

