



ORIGINAL	SUPERIOR
POWER	POWER
⦿ / AUDIO	MUTE
🏠 / HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV / INPUT	📺 / AV
MENU / LIST	-/--
DISPLAY	📺
DVD	📺
HDD	📺
PR. LIST	📺
SKIP NEXT	P+
SKIP PREV.	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIMESHIFT	SLEEP
TV / DVD	TV/DTV
TITLE	INFO
EPG	EPG
✓ / MARKER	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	▲
PAUSE / STEP	⏸
STOP	■
REC	RED
SCAN REW	GREEN
PLAY	YELLOW
SCAN FWD	BLUE
PR.-	SHIFT+DOWN
PR.+	SHIFT+UP
RED / FAV	SHIFT+RED
GREEN / REPEAT	SHIFT+GREEN
YELLOW / SUBTITLE	SHIFT+YELLOW
BLUE / TEXT	SHIFT+BLUE
TV	
TV POWER	SHIFT+POWER
AV / INPUT	SHIFT+AV
VOL-	SHIFT+ VOL-
VOL+	SHIFT+ VOL+
PR./CH -	SHIFT+ P-
PR./CH +	SHIFT+ P+

