



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EIXTI	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
LIST	-/--
HOME	
TIMESHIFT	
TXT	
SKIP NEXT	VOL+
SKIP PREV	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CANC	BACK
TV/DVD	TV/DTV
INFO	INFO
GUIDE	EPG
FAV	FAV
EJECT	 / NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
PAUSE	BLUE
OFF	SHIFT+POWER
AUDIO	SHIFT+MUTE
DVD	SHIFT+1
HDD	SHIFT+2
ON	SHIFT+0
SUBTITLE	SHIFT+ 
PROGRAM LIST	SHIFT+OK
PROGRAM UP	SHIFT+UP
PROGRAM DOWN	SHIFT+DOWN
REPEAT	SHIFT+BACK
STEP	SHIFT+SLEEP
TITLE	SHIFT+INFO
MARKER	SHIFT+FAV
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

