



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
HOME / HOME	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION / FUNCTION	SOURCE / SOURCE
SPEAKER LEVEL	-/--
TITLE / POPUP	
SUBTITLE	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV	P-
UP / PRESET+	UP
DOWN / PRESET-	DOWN
LEFT / TUNING-	LEFT
RIGHT / TUNING+	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
OPTICAL / TV SOUND	TV/DTV
INFO/MENU	INFO
SOUND EFFECT	FAV
OPEN / CLOSE	NET TV

ORIGINAL	SUPERIOR
PAUSE / STEP	PAUSE
STOP	STOP / SMART
REC	RED
SCAN REW	GREEN
PLAY	YELLOW
SCAN FWD	BLUE
AUDIO	SHIFT+MUTE
DISC MENU	SHIFT+MENU
REPEAT	SHIFT+BACK
RED / RDS	SHIFT+RED
GREEN / PTY	SHIFT+GREEN
YELLOW / PTY SEARCH	SHIFT+YELLOW
BLUE / MONO/STE.	SHIFT+BLUE

