



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PTY/HDMI	/ SOURCE
RDS/RESOL.	-/--
DISPLAY	
ZOOM	
SETUP	
/ S – TITLE	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
VSN	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
PROG./MEMO	EPG
MARKER	FAV
OPEN/CLOSE	/ NET TV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE
/ AUDIO	SHIFT+MUTE
XTS Pro	SHIFT+MENU
SEARCH	SHIFT+EXIT
AUX	SHIFT+1
DVD	SHIFT+2
TUNER	SHIFT+3
USB	SHIFT+4
PRESET NEXT	SHIFT+UP
PRESET PREV	SHIFT+DOWN
TUN -	SHIFT+LEFT
TUN+	SHIFT+RIGHT
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
TITLE	SHIFT+INFO
SOUND	SHIFT+FAV

