

ORIGINAL	SUPERIOR
POWER	POWER
A – B	MUTE
DVD MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	 / SOURCE
PROGRAM	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
TV/DVD	TV/DTV
TITLE	INFO
MARKER	FAV
EJECT	 / NET TV
PAUSE	 / SMART TUBE

ORIGINAL	SUPERIOR
STOP	 / SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PIP	SHIFT+1
ANGLE	SHIFT+2
3D SURR	SHIFT+3
SEARCH	SHIFT+ 
TIMER REC	SHIFT+ 
REC MODE	SHIFT+ 
CHAP ADD	SHIFT+ 
INSTANT SKIP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
THUMBNAIL	SHIFT+INFO
RANDOM	SHIFT+FAV

