



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
VCR	/ SOURCE
AM/FM	-/--
DISPLAY TOGGLE	
DIRECT TUNE	
RANDOM	
SCAN	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
DOWN	DOWN
INPUT TV	TV/DTV
SHUFFLE	INFO
SURROUND TOGGLE	EPG
TUNER SIGNAL STRE.	FAV
EJECT	/ NET TV
PAUSE	/ SMART TUBE
STOP	/ SMART VIDEO
REW	GREEN
PLAY	YELLOW
FWD	BLUE

ORIGINAL	SUPERIOR
AUDIO	SHIFT+1
CD	SHIFT+2
DVD	SHIFT+3
TAPE	SHIFT+4
TUNER	SHIFT+5
7/8/9/10/11	SHIFT+6/7/8/9/0
VIDEO	SHIFT+
TUNER STEREO TOG.	SHIFT+
BALANCE RIGHT	SHIFT+ VOL+
BALANCE LEFT	SHIFT+ VOL -
BASS+	SHIFT+UP
BASS -	SHIFT+DOWN
TREBLE -	SHIFT+LEFT
TREBLE+	SHIFT+RIGHT
PRESET NEXT	SHIFT+ P+
PRESET PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
PRESETS	SHIFT+FAV
PREV. TRACK	SHIFT+GREEN
PLAY INTRO	SHIFT+YELLOW

