



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / STORE	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
CD	 / SOURCE
>10	-/--
CHANGE DISP.	
INTRO	
DISPLAY TOGGLE	
EDIT	
VOL+	VOL+
VOL-	VOL-
SKIP NEXT	P+
SKIP PREV.	P-
OK	OK
BACK	BACK
TIME	SLEEP
DISC	TV/DTV
DIMMER	INFO
MEM.	EPG
RANDOM	FAV
EJECT	 / NET TV
PAUSE	

[illegible]