



ORIGINAL	SUPERIOR
	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/TRACKING -	1
2	2
3/TRACKING+	3
4/5/6	4/5/6
7/8/9/0	7/8/9/0
INPUT	/ SOURCE
SEARCH	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP/PR.+	UP
DOWN/PR. -	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK/ENTER	OK
LAST CH.	BACK
TV/VCR	TV/DTV
TITLE/PBC	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
MARK	FAV
OPEN/CLOSE	/ NET TV
SPEED	/ SMART TUBE
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY/PAUSE	YELLOW
FF.	BLUE
SYSTEM	SHIFT+MENU
VCR	SHIFT+1
DVD	SHIFT+2
3D	SHIFT+3
ANGLE	SHIFT+
REPLAY	SHIFT+LEFT
CM – SKIP	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP

