



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
TIMESHIFT	
TTX	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
RED / ZOOM	RED
GREEN / ASPECT	GREEN

ORIGINAL	SUPERIOR
YELLOW / V-FORMAT	YELLOW
BLUE / TIMER	BLUE
LANG.	SHIFT+MUTE
GO TO	SHIFT+2
SUBTITLE	SHIFT+
PG DN	SHIFT+DOWN
PG UP	SHIFT+UP
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

