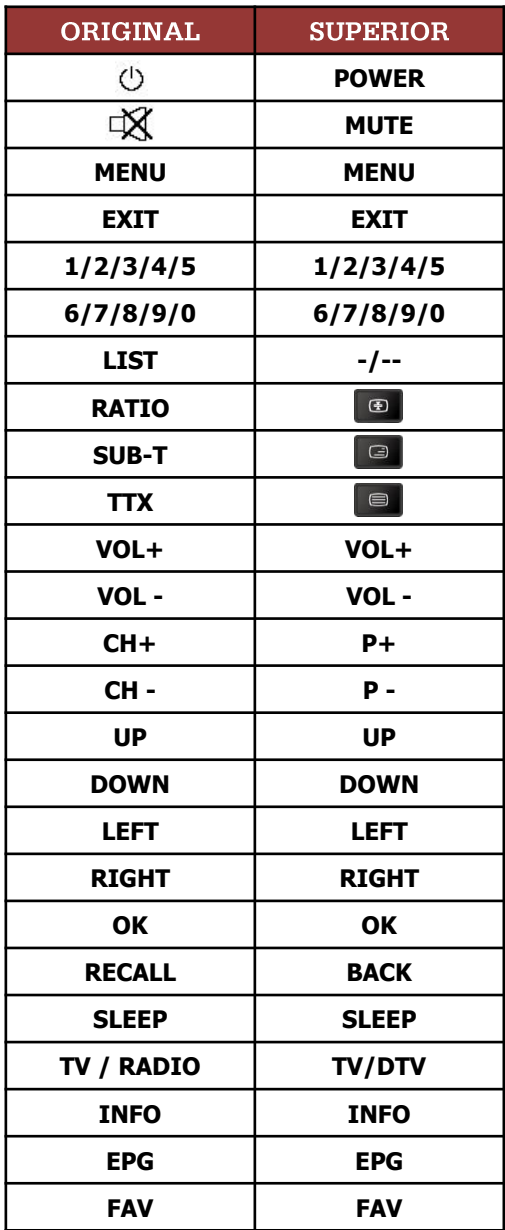


A black Superior 4 in 1 remote control. At the top, there are two buttons: 'POWER' with a red power icon and 'MUTE' with a speaker icon. Below these are four buttons: 'TV', 'SAT', 'DVD', and 'AUX'. The next row contains 'MENU', 'EXIT', and 'SHIFT'. A numeric keypad follows, with buttons for digits 1-9, '0', and a '+/-' button. Below the numeric keypad are 'TV/AV', 'PVR', 'SIZE', and 'SETUP' buttons. The center features a directional pad with 'OK' in the middle, and 'V' and 'P' buttons on the left and right respectively. Below the directional pad are 'BACK', 'SLEEP', and 'TV/DTV' buttons. The next row has 'INFO', 'EPG', and 'FAV' buttons. Below that are 'NET TV' (with a red arrow icon), 'II' (pause), and 'SMART' buttons. At the bottom are four large colored buttons: a red dot, a green double left arrow, a yellow right arrow, and a blue double right arrow. The brand name 'SUPERIOR' and '4 in 1' are printed at the very bottom.