



ORIGINAL	SUPERIOR
ON/STANDBY	POWER
MUTE	MUTE
OPTION	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
+10	-/--
SETUP	
VOLUME+	VOL+
VOLUME -	VOL -
CH/PAGE+	P+
CH/PAGE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
SLEEP	SLEEP
AUX 1	SHIFT+1
AUX 2	SHIFT+2
BLURAY	SHIFT+3
CBL/SAT	SHIFT+4
CD	SHIFT+5
DVD	SHIFT+6
GAME	SHIFT+7

ORIGINAL	SUPERIOR
INTERNET RADIO	SHIFT+8
IPOD/USB	SHIFT+9
MEDIA PLAYER	SHIFT+0
M - XP	SHIFT+
NETWORK	SHIFT+
PHONO	SHIFT+
TUNER	SHIFT+
FAVORITE STATION 1	SHIFT+UP
FAVORITE STATION 2	SHIFT+DOWN
FAVORITE STATION 3	SHIFT+LEFT
FAVORITE STATION 4	SHIFT+RIGHT
SOUND MODE MOVIE	SHIFT+RED
SOUND MODE MUSIC	SHIFT+GREEN
SOUND MODE PURE	SHIFT+YELLOW
SOUND MODE GAME	SHIFT+BLUE

