



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
OPTION	MENU
ECO / ECO	EXIT
CBL/SAT	1
DVD	2
BLU – RAY	3
GAME	4
AUX 1	5
MEDIA PLAYER	6
TV AUDIO	7
AUX 2	8
TUNER	9
IPOD/USB	0
CD	□ / SOURCE
BLUETOOTH	-/-
SETUP	□
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT / TUNE+	P+
SKIP PREV / TUNE -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT

ORIGINAL	SUPERIOR
ENTER	OK
BACK	BACK
SLEEP	SLEEP
PHONO	TV/DTV
INFO	INFO
ONLINE MUSIC	▲ / NET TV
INTERNET RADIO	■ / SMART
PLAY/PAUSE	YELLOW
SMART SELECTOR 1	SHIFT+1
SMART SELECTOR 2	SHIFT+2
SMART SELECTOR 3	SHIFT+3
SMART SELECTOR 4	SHIFT+4
CH/PAGE+	SHIFT+ P+
CH/PAGE -	SHIFT+ P -
RED / MUSIC	SHIFT+RED
GREEN / MOVIE	SHIFT+GREEN
YELLOW / PURE	SHIFT+YELLOW
BLUE / GAME	SHIFT+BLUE

