



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
MENU OFF	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
S – DIRECT	/ SOURCE
ATT.	-/--
DISP. / RDS	
DOLBY	
SET UP / T. TONE	
F. DIRECT	
MAIN VOL. +/-	VOL +/-
TUNE/SEARCH NEXT	P+
TUNE/SEARCH PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
CLEAR	BACK
SLEEP	SLEEP
A. / D.	TV/DTV
DIMMER	INFO
MEMO.	EPG

ORIGINAL	SUPERIOR
MODE	FAV
AUTO	/ NET TV
BASS -/+	RED / GREEN
TREBLE -/+	YELLOW / BLUE
AUX	SHIFT+1
CD	SHIFT+2
CDR / MD	SHIFT+3
DSS / VCR 2	SHIFT+4
TAPE	SHIFT+5
TUNER	SHIFT+6
TV	SHIFT+7
VCR 1	SHIFT+8
P. SCAN	SHIFT+ -/--
OSD	SHIFT+
DSP	SHIFT+
DTS	SHIFT+
CS. 5.1	SHIFT+
CHANNEL/SKIP NEXT	SHIFT+ P+
CHANNEL/SKIP PREV	SHIFT+ P -
NIGHT	SHIFT+SLEEP
PTY.	SHIFT+EPG
2 CH.	SHIFT+RED
6.1	SHIFT+GREEN
6 – STEREO	SHIFT+YELLOW
7 CH – DIR.	SHIFT+BLUE

