

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD	 / SOURCE
SPKR. A/B	-/--
DISPLAY	
P. DIRECT	
SETUP	
EQ.	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
TV	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
MEMO.	EPG
CH. SEL.	FAV
AUTO	 / NET TV
PAUSE	
STOP	 / SMART
RANDOM	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
POWER ON	SHIFT+POWER
TOP	SHIFT+MENU
CL.	SHIFT+EXIT
HDMI	SHIFT+1
ZONE A	SHIFT+2
ZONE B	SHIFT+3
ATT.	SHIFT+4
SURR.	SHIFT+5
STEREO	SHIFT+6
M – DAX	SHIFT+7
BAND	SHIFT+8
F. DIRECT	SHIFT+9
POWER OFF	SHIFT+0
7.1	SHIFT+ 
LIP SYNC.	SHIFT+ -/--
V. OFF	SHIFT+ 

ORIGINAL	SUPERIOR
T. TONE	SHIFT+ 
T. MODE	SHIFT+ 
HT EQ.	SHIFT+ 
PRESET+	SHIFT+ VOL
PRESET -	SHIFT+ VOL
INPUT-	SHIFT+ P+
INPUT+	SHIFT+ P -
BASS+	SHIFT+UP
BASS -	SHIFT+DOW
TREBLE-	SHIFT+LEF
TREBLE+	SHIFT+RIGH
P. LOCK	SHIFT+OK
NIGHT	SHIFT+SLEE
A / D	SHIFT+ TV/D
T. DISP.	SHIFT+INF
PTY	SHIFT+EPG
P. SCAN	SHIFT+ 
CAT -	SHIFT+REL
CAT+	SHIFT+GREE
CH -	SHIFT+YELL
CH+	SHIFT+BLU

