



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
GO TO	-/--
PBC	
ZOOM	
ANGLE	
/ SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
SEL.	OK
REPEAT - 1/ALL	BACK
TV SYS.	TV/DTV
INFO	INFO
PROGRAM	EPG
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE / STEP	
STOP	/ SMART
F. BWD.	GREEN
PLAY	YELLOW
F. FWD.	BLUE
/ AUDIO	SHIFT+MUTE
SETUP	SHIFT+
REPEAT A - B	SHIFT+BACK
TITLE	SHIFT+INFO
SLOW	SHIFT+

