



ORIGINAL	SUPERIOR
PWR	POWER
MUTE	MUTE
MENU	MENU
SYS. OFF	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
MODE	/ AV
+10	-/--
POWER	
POWER OFF	
TRIM	
VOLUME+	VOL+
VOLUME-	VOL-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
BACK	BACK
INFO	INFO
PAUSE	
STOP	
CHAN. REW	GREEN
PLAY	YELLOW
CHAN. FF	BLUE

ORIGINAL	SUPERIOR
PH / AUX	SHIFT+1
CD	SHIFT+2
CD 2	SHIFT+3
DVD	SHIFT+4
LV	SHIFT+5
SAT	SHIFT+6
TAPE	SHIFT+7
TAPE 2	SHIFT+8
TV	SHIFT+9
TUNER	SHIFT+0
VCR	SHIFT+ / AV
VCR 2	SHIFT+ -/--
LEVEL+	SHIFT+ VOL+
LEVEL-	SHIFT+ VOL-
ACC ON	SHIFT+UP
ACC OFF	SHIFT+DOWN
OUTPUT 1 / AM / DISC	SHIFT+LEFT
OUTPUT 2 / FM / TRACK	SHIFT+RIGHT

