



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / RADIO	/ SOURCE
USB	-/--
V. FORMAT	
SUBTITLE	
TELETEXT	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV / STB	TV/DTV
INFO	INFO
GUIDE	EPG

ORIGINAL	SUPERIOR
RED/BOOKMARK	RED
GREEN/BOOKMARK JUMP	GREEN
YELLOW	YELLOW
BLUE/SAT	BLUE
AUDIO	SHIFT+MUTE
SEARCH / F1	SHIFT+1
ZOOM / F2	SHIFT+2
M/P / F3	SHIFT+3
MULTIFEED / F4	SHIFT+4
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
STEP	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FORWARD	SHIFT+BLUE

