



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
HOME	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI / AV	/ SOURCE
EDIT	-/--
DISK	
COPY	
TTX / DVD	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT / PG UP	P+
SKIP PREV / PG DOWN	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
TIMER REC	SLEEP
DTV	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
MOVIE	SHIFT+1
MUSIC	SHIFT+2
PHOTO	SHIFT+3
S/S	SHIFT+ -/--
SETUP	SHIFT+
SUB - T	SHIFT+
REPEAT	SHIFT+BACK
TV/RADIO	SHIFT+ TV/DTV
STOP	SHIFT+
REC	SHIFT+RED
REV	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
F.F.	SHIFT+BLUE

