



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / SLEEP	0
AV / TV/SAT	 / SOURCE
-/-- / TV/RADIO	-/--
MOVIE	
	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
USB	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV

[illegible]