



ORIGINAL	SUPERIOR
POWER	POWER
/ AUDIO	MUTE
MENU/LIST	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
3D SURR.	-/--
DISPLAY	
ZOOM	
SETUP	
/ SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TIMER REC	SLEEP
TV/DVD	TV/DTV
/ HOME	INFO
ANGLE	EPG
MARKER	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
PAUSE/STEP	/ SMART TUBE
STOP	/ SMART VIDEO
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SEARCH	SHIFT+EXIT
CHP ADD.	SHIFT+
RANDOM	SHIFT+
DUBBING	SHIFT+
THUMBNAIL	SHIFT+
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
REC MODE	SHIFT+TV/DTV
TITLE	SHIFT+INFO
I SKIP	SHIFT+EPG
TIME SHIFT	SHIFT+FAV

