



ORIGINAL	SUPERIOR
POWER	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
USB	/ SOURCE
MODE	-/--
DISPLAY	
FIND	
OPT	
TXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV/R	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
RED / AUDIO	RED
GREEN / PAUSE	GREEN
YELLOW / ZOOM	YELLOW
BLUE / SAT	BLUE
F1	SHIFT+1
SUB	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAGE+	SHIFT+UP
PAGE -	SHIFT+DOWN
TIME	SHIFT+SLEEP
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REWE	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWDD	SHFIT+BLUE

