



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9	6/7/8/9
0 / AUDIO / LANG.	0
UHF	 / SOURCE
---	-/--
VOL +	VOL +
VOL -	VOL -
PR +	P +
PR -	P -
UP	UP
DOWN	DOWN
LEFT / SKIP PREV	LEFT
RIGHT / SKIP NEXT	RIGHT
OK / LIST	OK
← PR.	BACK
TV / RADIO	TV/DTV
INFO	INFO
EPG	EPG
FAV	FAV
WHITE / FAV -	
RED / TEXT	RED

[illegible]