



ORIGINAL	SUPERIOR
OFF	POWER
MUTE	MUTE
DSP	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PHASE	-/--
DISPLAY	
OSD	
ANGLE	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
STORE	TV/DTV
PAUSE	
STOP	/ SMART
RECORD	RED

ORIGINAL	SUPERIOR
REW	GREEN
PLAY	YELLOW
FWD	BLUE
CABLE	SHIFT+1
CD	SHIFT+2
CDR	SHIFT+3
DVD	SHIFT+4
LD	SHIFT+5
LP	SHIFT+6
RADIO	SHIFT+7
TAPE 1	SHIFT+8
TAPE 2	SHIFT+9
TV	SHIFT+0
VCR 1	SHIFT+
VCR 2	SHIFT+ -/--
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
REPEAT	SHIFT+BACK

