



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
 → / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DTV / VCR	 / SOURCE
S-T.	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RECALL	BACK
INFO	INFO
EPG	EPG
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW / TV/RADIO	YELLOW

[illegible]