



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
--	-/--
LIST	
LANG.	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
←	BACK
TIMER	SLEEP
TV / RAD.	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE / SOS	BLUE
	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
PAGE DOWN	SHIFT+DOWN
PAGE UP	SHIFT+UP
	SHIFT+SLEEP
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

