



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
LANG.	
	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
←	BACK
TV / R.	TV/DTV
INFO	INFO
EPG	EPG
	FAV
	 / NET TV
RED / TIMER	RED

[illegible]