



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
LIST	-/--
LANG.	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
←	BACK
TV / R.	TV/DTV
INFO	INFO
EPG	EPG
	FAV
	/ NET TV
RED / TIMER	RED

ORIGINAL	SUPERIOR
GREEN / EJECT	GREEN
YELLOW	YELLOW
BLUE / SOS	BLUE
	SHIFT+
	SHIFT+UP
	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	SHIFT+
STOP	SHIFT+
---	SHIFT+RED
F.RW.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
F.FW.	SHIFT+BLUE

