



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
DVD MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / AV	/ AV
+10	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
DVD VOLUME+	VOL+
DVD VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / CH+	UP
DOWN / CH -	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
CLK	SLEEP
TV / VCR	TV/DTV
DIGEST	INFO

ORIGINAL	SUPERIOR
PROGRAM	EPG
ROOT	FAV
OPEN / CLOSE	
PAUSE / STEP	
STOP	
REC	RED
REW	GREEN
PLAY	YELLOW
F. F.	BLUE
AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
PBC	SHIFT+
SP / LP	SHIFT+
ANGLE	SHIFT+
REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
VCR / DVD	SHIFT+TV/DTV
SLOW REW	SHIFT+GREEN
SLOW F. F.	SHIFT+BLUE

