



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
-/--	-/--
ENCORE	
COUNTER RESET / NEXT	
1-2-3 MENU	
JOG+	UP
JOG-	DOWN
SHUTTLE / INDEX LEFT	LEFT
SHUTTLE / INDEX RIGHT	RIGHT
O.K. PROG.	OK
DATA ON SCREEN	INFO
EJEC	
PAUSE	
REC	RED
REW	GREEN
PLY / STOP	YELLOW
FF	BLUE

ORIGINAL	SUPERIOR
TV	
TV POWER	SHIFT+POWER
AV	SHIFT+  / AV
VOLUME+	SHIFT+ VOL+
VOLUME-	SHIFT+ VOL-
TV CHANNEL+	SHIFT+ P+
TV CHANNEL-	SHIFT+ P-

