



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
/ MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ INPUT	/ AV
ANGLE / LIST	-/--
/ P. MODE	
DVD SETUP / EXIT	
/ SLOW	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ SLEEP	BACK
i+	SLEEP
EPG / D. MENU	INFO
/ S. MODE	EPG
	FAV

ORIGINAL	SUPERIOR
/ ASPECT	
RED / TV/R / D. PROG	RED
GREEN / STEP	GREEN
YELLOW / RPT.	YELLOW
BLUE / SCR / A-B	BLUE
AUDIO	SHIFT+MUTE
	SHIFT+
	SHIFT+
	SHIFT+
SUB-T	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
	SHIFT+UP
/ ZOOM	SHIFT+DOWN
♥ - / D. DIPS.	SHIFT+LEFT
♥ + / D. GOTO	SHIFT+RIGHT
♥ / D. TITLE	SHIFT+OK
	SHIFT+INFO
AQT / AUTO	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

